

Instructions to Operate Potty Fun™ Gadget

Wearing Potty Fun™ Gadget

When placing Potty Fun™ Gadget on your child's wrist, be sure the knob is pushed completely through the hole at the desired setting. This will keep the band secure. Fits child wrist size of approx. 5 inches to 6 ¼ inches.

We are the #1 (and #2) name in Potty Training FUN!™ Our patented and trademarked Potty Fun™ Gadgets make Potty Training FUN, Interactive and Imaginative for your child! Each Potty Fun™ Gadget has a fun, theme-based timer to help your child remember *and want* to go potty. After counting down from selected interval (30, 60 or 90) minutes, your Potty Fun™ Gadget will flash lights, and play a theme-based message or song reminding your child it is time to potty.

- Blue: Spy Potty Mission theme
- Pink: Potty Princess theme
- Green: Skip to My Lou song

Instructions to get started:

1. **TEST Sound Chip:** Press and hold **MODE** for 3-seconds.
2. **Turn ON:** Press and hold **START/STOP (Power Button)** *for 3 seconds.*
3. **Turn OFF:** Press and hold **START/STOP (Power Button)** *for 3 seconds.*
4. **MODE:** Press **MODE** to choose interval reminders: (30, 60, 90) minutes.
5. **START:** Once time interval is selected, press and release **START/STOP** *briefly.*

Once countdown starts, Potty Fun™ Gadget will “**LOCK**” to prevent child interruption.

To “**UNLOCK**” (Pause or Reset): Hold **START/STOP** button *for 3 seconds* and release.

Holding for 3 seconds unlocks Gadget and pauses countdown. When paused, Gadget will turn OFF after 60 seconds—if *no additional instruction is given.* Within 60-second window after being Paused, the following options can be selected:

1. To Resume countdown, press and release **START/STOP** briefly.
2. To Reset countdown, hold **START/STOP** button for 2 seconds, then release.

8 Cycle shut down:

Potty Fun™ Gadgets are designed to work for 8 continuous cycles. For example, if you choose 60 minutes, your child will get a reminder every 60 minutes for 8 hours (8 cycles at 60 minutes), then Potty Fun™ Gadget goes to OFF mode.

Additional Information

When you turn Potty Fun™ Gadget on, you have 60 seconds to choose an interval countdown by pressing **MODE**, and then **START/STOP** to begin countdown. If no additional instruction is given after turning on, Potty Fun™ Gadget will turn off. These are safeguards to preserve battery life.

Good luck, have fun, and remember at PottyFun.com, poopin' is a blast!™

This is a lead-free product
Not intended for children under 18 months

All PottyFun.com™ products, names, taglines and slogans are patent and trademark protected.